CTS

Carr Tailored Shelving

TAILORED TO YOUR TYPE: WALL MOUNT, FREESTANDING, MOBILE.

TAILORED TO YOUR EXACT SIZE

TAILOR TO YOUR STORAGE NEEDS WITH MANY OPTIONS.

ADJUSTABLE SHELF ANGLE.

GREATER STORAGE EFFICIENCY.

SIMPLE, STRONG, ADAPTABLE.

EASIER INSTALLATION.






CTS Configurations

WALL MOUNTED. Shelving mounts directly onto wall, secured with bolts.

FREESTANDING. Supports are connected and shelving stands independently on adjustable leveling feet.

MOBILE. Supports are connected and rubber wheels added for mobility.

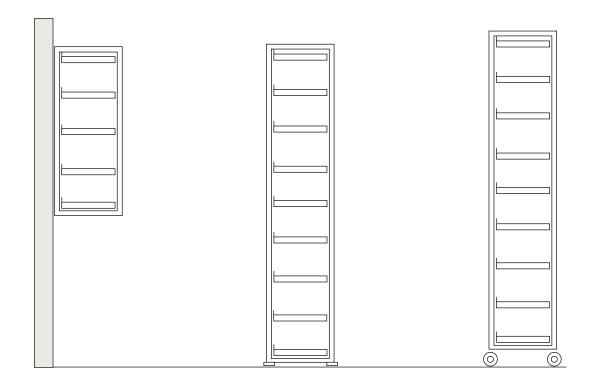

CARR CORPORATION

carrcorp@aol.com - 800 952 2398 carrcorporation.com - 8/14 - Page 2

SIMPLE IS BETTER. Conventional shelving has a surprising number of parts and subsystems. Why? Complexity is easy to design, simplicity is much harder. Complexity leads to wasted time and unnecessary costs. CTS has only 2 parts: supports and shelves. It is simple and intuitive.







EXCEPTIONAL STRENGTH. Supports are made of welded 1" square .0625 thick tube. Shelves are heavy gauge and reinforced front, back and sides. Weight capacity is provided.

SHELF HEIGHT ADJUSTS WITH-OUT TOOLS. Shelves should adjust to changing storage needs, not be de-facto permanent. CTS shelves adjust in .50" increments in minutes.

HOSPITAL GRADE. Designed specifically for stringent antibacterial procedures. Shelves are removable without tools in seconds to enable easy access to undersides and back.


TAILORED FINISH. CTS is made of either type 304 stainless steel with a # 4 finish, or powder coated pure white electrogalyanized steel.


CARR CORPORATION carrcorp@aol.com - 800 952 2398



OBSTRUCTION FREE STORAGE.

Traditional shelf supports intrude into the storage area. These interfere with efficient storage and reduce capacity, especially in longer installations with numerous supports on each shelf. CTS relocates these supports out of the storage area.

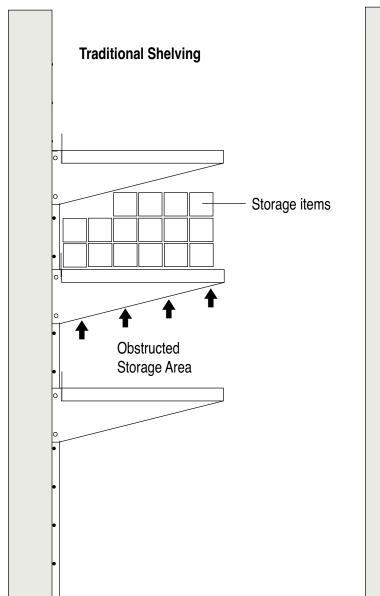


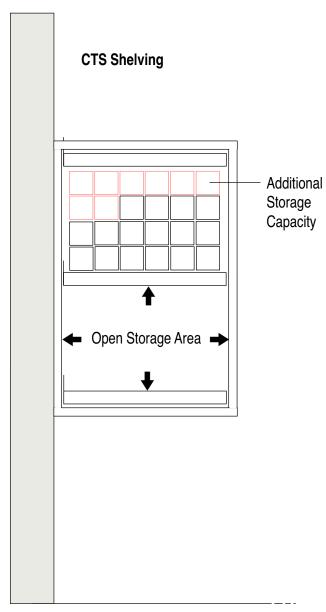

CARR CORPORATION

carrcorp@aol.com - 800 952 2398 carrcorporation.com - 8/14 - Page 5

EASIER, FASTER INSTALLATION. Attach supports to wall and place shelves in position. Installation time and errors are significantly reduced.

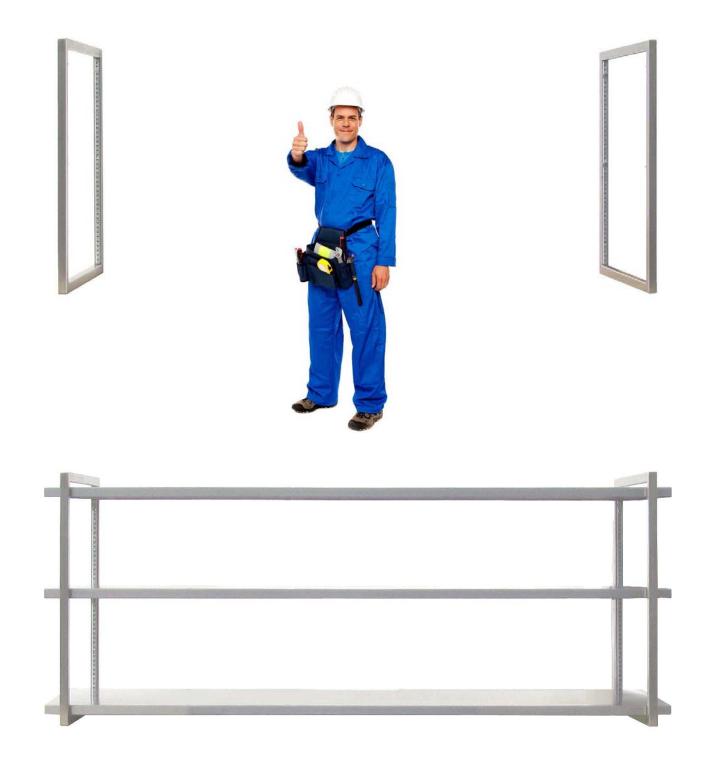

CARR CORPORATION carreorp@aol.com - 800 952 2398 carreorporation com - 8/14 - Page 6

CTS Shelving Options

SHELF DIVIDER. Optional dividers can be locked in place anywhere along the shelf. Simple to unlock and reposition. Typical height is 3" but can be tailored to your needs. Option SD.

ADJUSTABLE SHELF ANGLE for easy access. Using optional clips, shelves can sit flat or angled to a degree tailored to your needs. Turning shelves around puts the backstop in front, preventing contents sliding off. Have some shelves flat, some angled slightly and some angled more on the same shelf set. Option ASA.

CARR CORPORATION carrcorp@aol.com - 800 952 2398 carrcorporation.com - 8/14 - Page 7





CTS Shelving Options

CLEAR STORAGE BIN OPTION. Unique Lexan bins are tailored to your exact size for maximum storage efficiency. Bins slide smoothly between shelf dividers. Option CSB.

Clear storage bins work on flat shelves.

Clear storage bins work equally well on shelves that have been angled up.

CARR CORPORATION carrcorp@aol.com - 800 952 2398 carrcorporation.com - 8/14 - Page 8








CTS Shelving Options

OPTIONAL SHELF BACKSTOPS. Backstops keep stored items from sliding off the back of the shelf. They are 1" high and run continuously

ADDITIONAL WEIGHT CAPACITY. Shelf supports can be reinforced with supplemental support arms for even more capacity. Shelves can be fitted with additional shelf reinforcement channels. Option SSA and option SRC.

CARR CORPORATION carreorp@aol.com - 800 952 2398





CTS Shelving Options



CARR CORPORATION

CTS Shelving Ordering


TAILOR TO YOUR EXACT SIZE.
Simply specify width, height, depth, shelf quantity and support quantity.


Each shelf set has at least two shelf supports. Supports are recommended every 48" of width.

Maximum width is 96". Additional shelf sets can be placed end to end.

For shelf depth, subtract 2.5" from depth.

Call Carr and we can assist you in obtaining a tailored fit for your application.

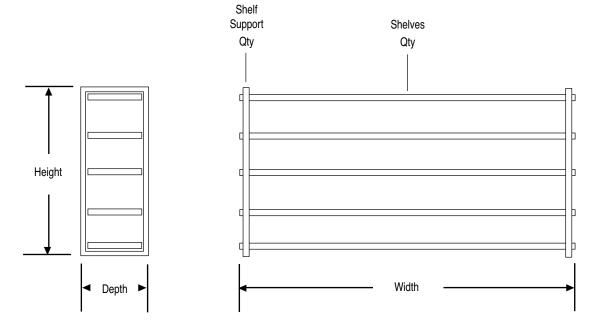



CARR CORPORATION

carrcorp@aol.com - 800 952 2398 carrcorporation.com - 8/14 - Page 11

CTS Shelving Specifications

CTS shelving is constructed of type 304 stainless steel with a number 4 finish. Optionally it may be made of electro-galvanized steel finished with Pure White powder coating throughout.

Rectangular shelf supports are constructed of 1.0" x 1.0" x .0625" thick square tubing heli-arc welded, ground and polished. Provided mounting holes are .250" diameter, hidden by removable 16 gauge shelf standards. Shelf clips have integral shelf locks.

Shelves are constructed of 18 gauge sheet folded, welded, ground and polished. Reinforcement channels are located under front, back and sides. Additional reinforcement channels for increased weight capacity are optional. Shelves are height adjustable in .500" increments. Shelf backstops optional.

CARR CORPORATION carrcorp@aol.com - 800 952 2398 carrcorporation.com - 8/14 - Page 12







CTS TAILORED SHELVING WALL MOUNTED MODEL CTS PROJECT:

ROOM: ELEVATION:


DATE: 9/1/14 DRAWING NO. 372 BY: 9JR SCALE: NOT TO SCALE

- ☐ 1. STAINLESS STEEL, TYPE 304 WITH NUMBER 4 FINISH.
- ☐ 2. ELECTRO-GALVANIZED STEEL WITH PURE WHITE POWDER COATED FINISH.
- 3. SHELF SUPPORT, 1" X 1" SQUARE TUBING, WELDED.
- 4. SHELF, ADJUSTABLE IN .500" INCREMENTS, QUANTITY
- ☐ 5. SHELF BACKSTOP, OPTIONAL.
- 6. SHELF LADDERS.

- 7. SHELF CLIPS WITH INTEGRAL SHELF LOCKS, NOT SHOWN.
- □ 8. SHELF CLIP WITH ADJUSTABLE SHELF ANGLE, NOT SHOWN.
- 9. MOUNTING HOLE, .250" DIAMETER, IN BACK.
- ☐ 10. SUPPLEMENTAL CAPACITY SUPPORT ARM, OPTIONAL.
- ☐ 11. DIVIDER, SHELF, OPTIONAL.
- ☐ 12. LEXAN BIN, OPTIONAL, SIZE:
- □ 13.

- **□** 14. .
- **□** 15.
- □ 16. □ 17.
- □ 18.
- **1**9.
- □ 20.

NOTE: ONLY ITEMS WITH MARKED BOXES ARE INCLUDED. NOTE: ALL DIMENSIONS +- 1/8".

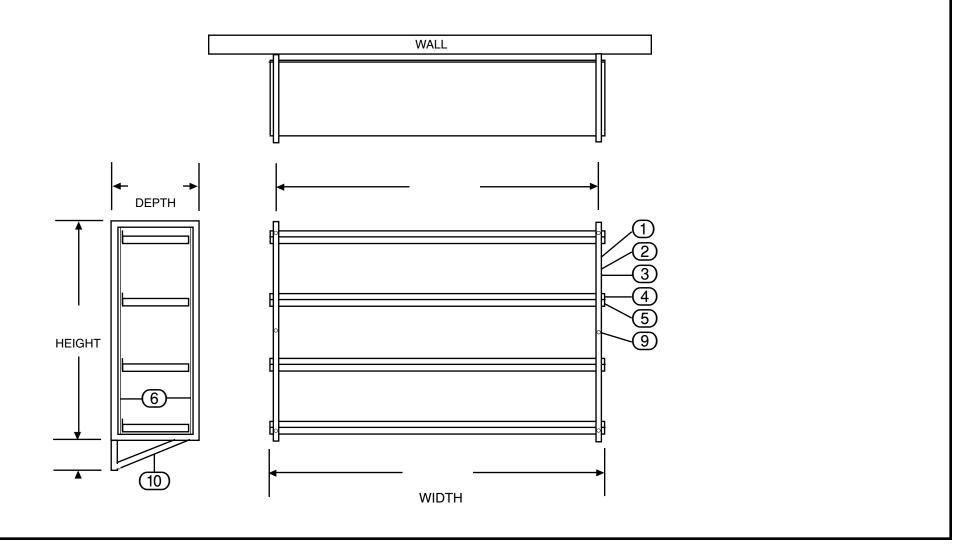

Carr Corporation

BACKGROUND INFORMATION Carr was extablished in 1946 to build the finest quality medical equipment. Based in Santa Monica California, it has prominet installations on all continents, including Antartica. Its innovative imaging systems were even selected for the SR-71 and Apollo moon landing programs. Our design philosophy: The greatest sophistication is simplicity" - Da Vinci.



Carr Corporation - 1547 11th Street Santa Monica, California, USA. 90401 Phone 310 587 1113 Fax 310 395 9751 Toll free phone in USA: 800 952 2398 Web site address: carrcorporation.com E-Mail address: carrcorp@aol.com





