

# Narcotics Security Locker NSL183012

Narcotics Security Locker built to federal standards for narcotics storage. 18"W, 30"H, 12"D. This was formerly model NL20.

Two reinforced doors for layered security. Locks are keyed different. Outer door cannot close if key is left in the inner door. Keys are not removable in unlocked position.

Welded heavy gauge double wall 304 stainless. Full height piano hinge with welded pin. 3 Shelves, height adjustable.

## OPTIONS

NSLL1: Lock, electronic.

NSLL2: Lock, elect, audit trail.

NSLDS: Door switch, 120 volt.

NSLRW: Remote warning light.

NSLSD: Single door optional.

See pages 2 and 3 for option details and model numbers.



Standard with 2 keyed locks.



Optional electronic locks.



# CARR

# Narcotics Security Locker NSL183012

## Options

### ELECTRONIC LOCK

Easy to use with 20 user codes, release knob, low battery indicator, non-volatile memory. Option NSLL1

### ELECTRONIC LOCK

#### & AUDIT TRAIL SOFTWARE

1,500 Event rolling audit trail is downloadable from the lock via micro USB port to your Windows PC with Excel software. Lock comes with Excel template. Programming of lock codes done through PC. Has 20 user different codes, release knob, low battery indicator and non-volatile memory. Option NSLL2



Electronic lock, NSLL1 option.



Electronic lock with audit trail, NSLL2 option.

# Narcotics Security Locker NSL183012

## Options

### DOOR SWITCH

This activates the optional remote warning light when the inner is door opened. 120V. Option NSLDS

### SINGLE DOOR

Not shown. In some circumstances only a single, outer door is needed. If so, the inner door can easily be deleted. Option NSLSD

### REMOTE WARNING LIGHT

Indicates when the narcotics security locker has been opened. Can be located in a nurses station for example or even on the cabinet exterior. Option NSLRW

### CARR CORPORATION

carrcorp@aol.com - 800 952 2398

carrcorporation.com - 5/21 - Page 3



# Carr Corporation

## BACKGROUND INFORMATION

Carr Corporation was established in 1946 to build the finest quality medical equipment. Based in Santa Monica California, it has prominent installations on all continents, including Antarctica. It's innovative imaging systems were even selected for the SR-71 and Apollo moon landing programs. Our philosophy: "The greatest sophistication is simplicity" - *Leonardo Da Vinci*.

## ADDRESS:

Carr Corporation  
1547 11th Street,  
Santa Monica, California, USA  
90401

## CARR CORPORATION

carrcorp@aol.com - 800 952 2398

carrcorporation.com - 5/21 - Page 4






**NARCOTICS SECURITY LOCKER**  
**MODEL NSL183012**  
 MODEL NL20 FORMERLY

DATE: 3/20/21 DRAWING NO.: 402  
 BY: JJR SCALE: 1 1/4" = 1' 0"

- 1. STAINLESS, TYPE 304, #4 FINISH.
- 2. DOUBLE WALL CONSTRUCTION.
- 3. DOOR, INNER, OUTER, DBL WALL
- 4. PIANO HINGE, FULL HEIGHT.
- 5. SHELF, HEIGHT ADJUSTABLE IN 1/2" INCREMENTS.
- 6. NYLON ROLLER DOOR CATCH, SPRING LOADED, NOT SHOWN.
- 7. DOOR KNOB, INNER, OUTER, SS.
- 8. KO, 7/8" DIA. FOR RWL (ITEM 12) ELECT CONNECT, 120V, 60HZ.

- 9. LOCK, KEYED, CHANGEABLE CORE, KEY REMOVABLE IN LOCKED POSITION ONLY. DOORS KEYED DIFFERENT.
- OUTER DOOR ■ INNER DOOR
- 10. LOCK, ELECTRONIC, 20 USER CODES, RELEASE KNOB, LOW BATTERY INDICATOR, OPTIONAL.
- OUTER DOOR □ INNER DOOR
- 11. LOCK, ELECTRONIC, WITH 1,500 EVENT ROLLING AUDIT TRAIL,

- WINDOWS PC BASED EXCEL SOFTWARE PROGRAMMING, MICRO USB PORT, NON-VOLATILE MEMORY, 20 USER CODES, RELEASE KNOB, LOW BATTERY INDICATOR, OPTIONAL.
- OUTER DOOR □ INNER DOOR
- 12. SWITCH FOR REMOTE WARNING LIGHT, OPTIONAL.
- 13. REMOTE WARNING LIGHT, RED LENS, 120V 60HZ, OPTIONAL.

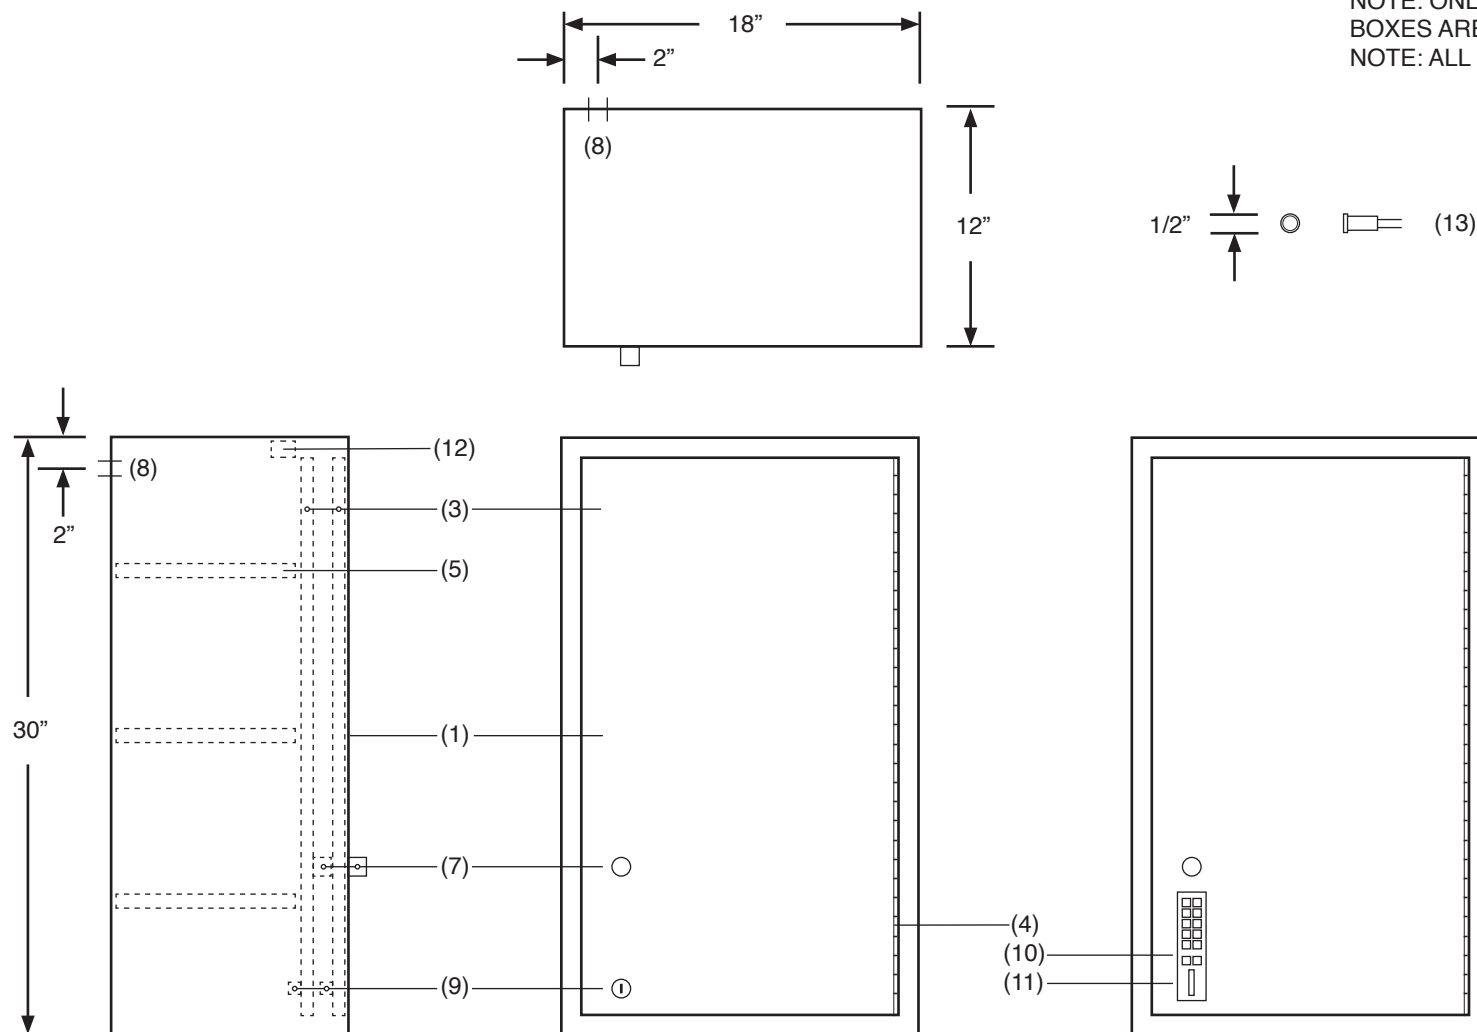


NOTE: ONLY ITEMS WITH MARKED BOXES ARE INCLUDED.  
 NOTE: ALL DIMENSIONS + - 1/8".

# Carr Narcotics Security Locker Model NSL183012 (Formerly NL20)

## Installation, Operation & Maintenance

Manual No. 371 Revised 5/10/21

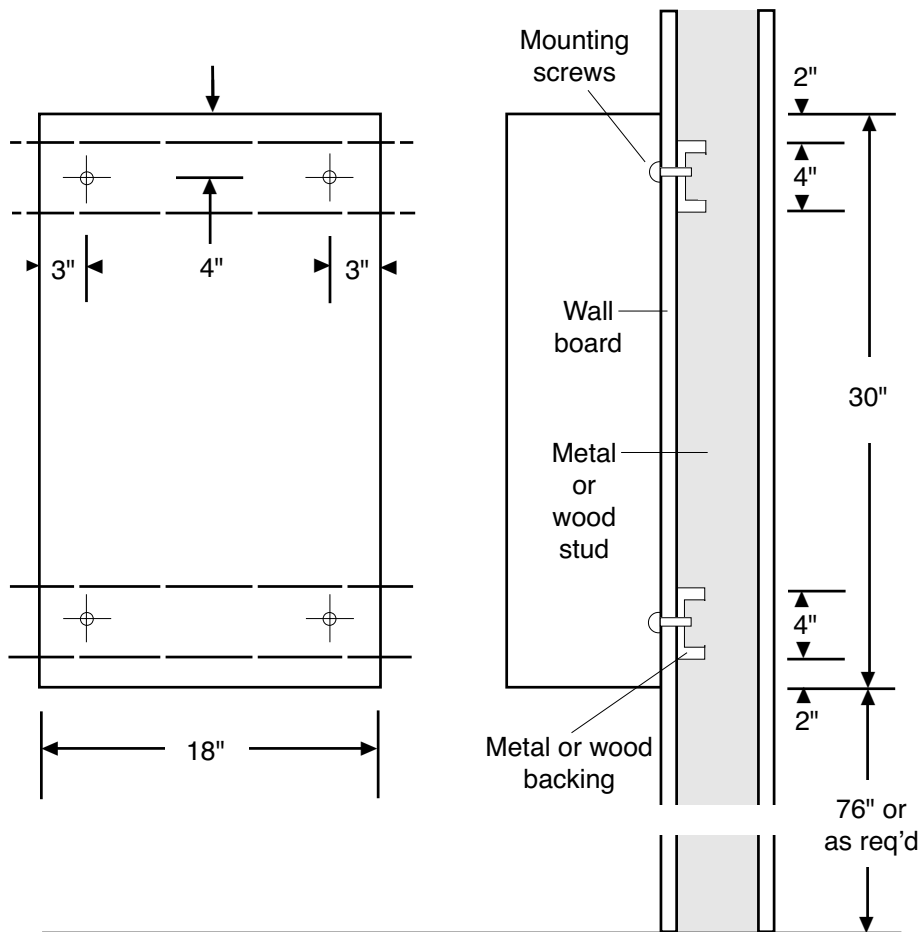

### Installation

1. Check local codes before beginning installation.
2. Drill holes in back of cabinet in locations shown to attach to backing. If backing is not used and instead you choose to screw directly into studs (if possible), drill holes in back of cabinet at appropriate locations.
3. Place cabinet on wall and secure with screws appropriate for type of wall material.
4. Check that cabinet is level.

### Operation

Cabinet can be unlocked using provided keys. Keys cannot be removed in the unlocked position. If key is lost or locks need to be changed, contact Carr.

### Maintenance

The cabinet is maintenance free. To clean, use a mild detergent with water and a soft cloth. Wiping cabinet with a mineral oil on a soft cloth will make the stainless steel shine.

**CARR**